



VİTA

GJE-7204R



Katı Meyve Sıkacağı

KULLANMA KILAVUZU

İÇİNDEKİLER

| | |
|---------------------------|---|
| Önemli Uyarılar | 2 |
| Genel Görünüm | 3 |
| Ürün Özellikleri | 4 |
| İlk Kullanım Öncesi | 4 |
| Ürün Kurulumu..... | 4 |
| Ürünün Kullanımı | 5 |
| Çalışma Süresi..... | 5 |
| Temizlik ve Bakım | 5 |
| Teknik Özellikler | 6 |

GOLDMASTER marka Katı Meyve Sıkacağı'ni tercih ettiğiniz için teşekkür ederiz. Ürünü kullanmadan önce bu kullanım kılavuzunu dikkatlice okuyunuz. Daha sonraki kullanımlarınıza referans olması için kılavuzu güvenli bir yere saklayınız.

ÖNEMLİ UYARILAR

- Ürünün üzerinde yazılı voltajın, bulunduğuunuz yerin voltajına uygun olup olmadığına dikkat ediniz. Herhangi bir uyuşmazlık durumunda meydana gelebilecek arızalardan firmamız sorumlu tutulamaz ve bu arıza garanti kapsamı dışında işlem görür.
- Ürün sadece evlerde kullanım içindir. Ticari ya da sanayi amaçlı kullanılmamalıdır. Aksi takdirde, garanti kapsamı dışında işlem görecektir.
- Ürüne zarar vermemek için yetersiz akım sağlayan uzatma kabloları kullanmayınız.
- Ürünü sofa, ocak gibi direkt ısı kaynaklarının üzerine veya çok yakınına yerleştirmeyiniz.
- Ürünü çocukların erişemeyeceği bir yerde muhafaza ediniz.
- Ürünü çocuklar, deneyim ve bilgi eksikliği olan kişiler, fiziksel (işitsel, görsel) veya zihinsel engelliler tarafından kullanıldığından, güvenliklerinden sorumlu bir kişinin gözetimi altında olmalıdır. Çocukların ürün ile oynamadıklarından emin olunmalıdır.
- Ürün kablosunun masa ya da tezgahınızın kenarından sarkmamasına ya da başka bir cihaz ile temas etmemesine dikkat ediniz.
- Ürünün metal filtresine dokunurken dikkatli olunuz, çok keskindir.
- Ürün çalışırken , hareketli parçalarına dokunmaktan kaçınınız. Ellerinizi, saçlarınızı, giysinizi veya herhangi bir aleti yaklaşıtmayınız.
- Ürüne, başka ürünlere ait aksesuarları kesinlikle takmayınız.
- Ürünün kablo ve fişine zarar verecek hareketlerden kaçınınız. Kablosundan tutarak taşımayınız, prizden çekmek için fişini tutunuz, asla kablosundan çekmeyiniz.
- Ürünün fişi takılıyken elinizi ve ürünün diğer aletlerini makina içine sokmayıniz.
- **Ürünün ana gövdesini (motor) kesinlikle bulaşık makinesinde yıkamayınız!**
- Ürünün hareketli parçalarının dönmesi tamamen durmadan bu kısımlara dokunmayıniz.

- Ürünün kablosu ya da fişi arızalı ise, düşürülme ya da başka bir sebepten dolayı zarar gördü ise kullanmayınız. Kendiniz tamir etmeyiniz, en yakın yetkili servisimize başvurunuz. Sadece orjinal yedek parça kulanmaya özen gösteriniz.
- Ürününüzde meyve ve sebzeleri içeri doğru itmek için parmaklarınızı kullanmayın. İtme aparatını kullanınız.
- Ürünün kapağını açma kapatma düğmesi gibi kullanmayın.
- Ürünü kullanmadığınız zamanlarda, temizlik ve bakımını yapmadan önce, parçaları sökülrken yada kullanıma hazır bekleme durumunda mutlaka fişini prizden çıkarınız.
- Ürünü, gıda harici parlayıcı, yanıcı maddeleri parçalamak için kullanmayın.
- Ürünü tavsiye edildiği şekilde ve amacına uygun kullanınız.

GENEL GÖRÜNÜM



ÜRÜN ÖZELLİKLERİ


- Meyve sertliğine göre ayarlanabilir 2 farklı hız kademesi
- %76 meyve suyu oranı
- Paslanmaz çelik parçalayıcı/süzgeç
- Çıkarılabilir 2L kapasiteli geniş posa haznesi
- 1000ml kapasiteli köpük ayırcılı meyve suyu sürahisi
- İnox kaplı gövde
- Geniş yiyecek kanalı

İLK KULLANIM ÖNCESİ

- Ürünü ilk kullanmanızdan önce mutlaka temizlemelisiniz.
- **Temizlik ve Bakım** bölümünde belirtildiği gibi bütün parçaları temizleyiniz.
- NOT:** Bıçaklar çok keskindir. Bıçakları temizlerken veya yıkarken çok özen gösteriniz ve asla parmağınız ile dokunmayın.
- Ürünü birleştirirken parçaların şemada belirtilen pozisyonlara gelmesine dikkat ediniz.
- Kullanmadan önce dikkat edilmesi gereken hususları okuyunuz

ÜRÜN KURULUMU

1. Süzgeç haznesini ana gövdenin üzerine yuvaları karşılıklı gelecek şekilde sabitleyiniz.
2. Süzgeci hazneye yerleştirip hafifçe bastırınız. Yerine oturma sesini duyduğuna emin olunuz.
3. Posa haznesini yerleştiriniz.
- Uyarı: Diğer aksesuarları yerleştirmeden önce herzaman ana gövdeye işlem haznesini ve aksesuarlarını yerleştiriniz.**
4. Posa ve süzgeç haznesine uyacak şekilde kanalın bulunduğu kapağı yerleştiriniz.
5. Emniyet kolunu yukarı doğru kaldırarak kapak üzerindeki yuvasına oturmasını sağlayın. Kolun yuvalarına oturmaması halinde güvenlik nedeniyle ürününüz çalışmayacaktır.
6. Meyve suyunuzun toplanacağı sürahiyi yerleştiriniz.
7. Meyve itme aparatını yerleştiriniz.

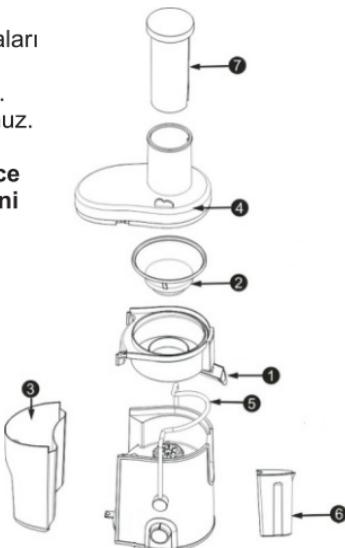

ÜRÜN KULLANIMI

- 1.Kullanmadan önce parçaların tam olarak sabitlendiğinden emin olunuz. Aksi takdirde oluşacak kaza ve yaralanmaları engellemek için ürününüz çalışmayacaktır.
- 2.Çalıştırmadan önce çelik süzgeçin yuvasına oturduğundan emin olunuz. Emniyet kolunu kapak üzerindeki yuvalarına sabitledikten sonra ürünü çalıştırabilirsiniz.
- 3.Ürünü ilk olarak 5 saniye boyunca meyve kullanmadan çalıştırınız. Daha sonra hazırladığınız katı meyve ve sebzeleri besleme kanalından ürune ekleyerek itme aparatıyla bastırınız.
- 4.Meyveleri bastırma aşamasında aşırı kuvvet uygulamayınız. Aksi takdirde ürünün verimsiz çalışması neticesinde meyve suyu miktarında azalma görebilirsiniz.

ÇALIŞMA SÜRESİ

Ürününüzde düğmesinde 0, I, ve II pozisyonlarını görebilirsiniz.
(0 kapalı, I zayıf parçalama, II kuvvetli parçalama). Ürününüzü 1 dakika süreyle çalıştırıldıktan sonra kapatınız. 1 dakika süreyle bekledikten sonra tekrar kullanınız. Bu şekilde tekrarlayacağınız 3 işlemden sonra ürününüzü 15 dakika süreyle dinlendiriniz. Bu sayede motorunuzun yıpranmasını engelleyerek ürününüzü daha uzun ömürlü olmasını sağlayabilirsiniz.

TEMİZLİK VE BAKIM

- Ürünün fışını prizden çekiniz.
 - Ürünü temizlemeden önce ürünün bütün parçalarını ayıriz.
 - Ana gövde sadece hafif nemli kumaş bir bez ile silinmeli ve silindikten sonra kuru kumaş bir bez ile kurulanmalıdır. Ürünü asla suya ya da akan suyun altına sokmayın.
 - Çıkarılabilir parçaları bulaşık makinesinde ya da elde yıkayabilirsiniz.
- Not:** Çıkarılabilir parçları her kullanımdan hemen sonra temizleyiniz. Ürünün bıçakları çok keskindir. Ürünün bıçaklarını temizlerken veya yıkarken çok özen gösteriniz ve asla keskin bölgelerine parmağınız ile dokunmayınız.

TEKNİK ÖZELLİKLER

Gerilim: 220-240V AC, 50/60Hz

Güç: 800W

Sınıf: 2

NOT: Ürünün özellikleri ve tasarımi haber verilmeksiz de değiştirilebilir.

WEEE



Cihazı evsel atıklar aracılığıyla imha etmeyiniz. Cihazın kurallara uygun olarak imha edilmesi için lütfen yetkili ve sertifikalı elektronik çöp toplama yerine başvurunuz. Bu toplama yerlerinin adreslerini, çevre koruması yetkililerinden veya belediyeden öğrenebilirsiniz. Cihazın ambalajı (karton kutu ve karton içindeki destek parçaları) atık kağıt olarak imha edilebilir.

EEE Yönetmeliğine uygundur.

EN-60335-2-14

Kullanım ömrü 7 yıldır.





**VİTA
GJE-7204R
Katı Meyve Sıkacağı**

Merkez Servis İletişim Bilgileri

AYYILDIZ ELEKTRİKLİ EV EŞYALARI İMALAT VE PAZARLAMA AŞ.
Bakır ve Pirinççiler Sanayi Sitesi Karanfil Sk. No:1 Beylikdüzü/İstanbul
TÜRKİYE

Fax:0212 693 02 24

Web:www.goldmaster.com.tr

E-mail:info@goldmaster.com.tr



CONTENTS

| | |
|-------------------------------------|---|
| Important Safety Instructions | 2 |
| Overview | 3 |
| Attention Before Using | 4 |
| Features | 4 |
| Use the Appliance | 5 |
| Juicing..... | 5 |
| Operating Time..... | 6 |
| Cleaning and Maintenance..... | 6 |
| Technical Specification..... | 6 |

Thank you for purchasing this Juice Extractor. Before using this product, it is important to read this instruction manual carefully.

Use the product only as described and for indicated purpose. Keep this manual in a safe place. If you hand this product onto anyone else, ensure to pass on along all the documentations relating to this product.


IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed including the following:

- Keep these instructions, warranty card, purchase receipt and, if possible, the box, together with inner packaging.
- This appliance is only for domestic use, and not for commercial use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
- Do not allow children to use the appliance without supervision.
- Inspect the power cable and appliance regularly. If any defect is found, do not operate.
- Do not attempt to repair the unit yourself, it must be repaired by qualified technicians to avoid any hazard.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a qualified person in order to avoid a hazard.
- Keep appliance and cable away from direct radiant heat from the sun, from damp, from sharp edges and other dangers
- Never use your appliance without paying attention! Always unplug the unit when not in use, even for a moment.
- Never use any accessories or parts from other manufacturers.
- Do not use outdoors.
- Never immerse the unit in water or any other liquids, or come into contact with them. Do not use it with wet hands.
- If the appliance should become wet or damp, remove plug from mains socket immediately. Do not put your hands in the water!
- Use this appliance only for its intended purpose.
- Never touch the rotating tools while still in motion; always wait for them to stop.

- Never use this appliance to mix or stir anything other than foods.
- Switch off and unplug:
 - before fitting or removing parts
 - after use
 - before cleaning
- Never use your fingers to push food down the feed tube. Always use the pusher supplied.
- This machine will be damaged and may cause injury if the interlock mechanism is subjected to excessive force.
- Don't let children play with this machine.
- Never use a damaged machine. Get it checked or repaired: see 'service'.
- Don't let excess cord hang over the edge of a table or worktop or touch hot surfaces.
- DO NOT operate without cover and pusher.
- DO NOT remove cover until blade stops turning.

OVERVIEW

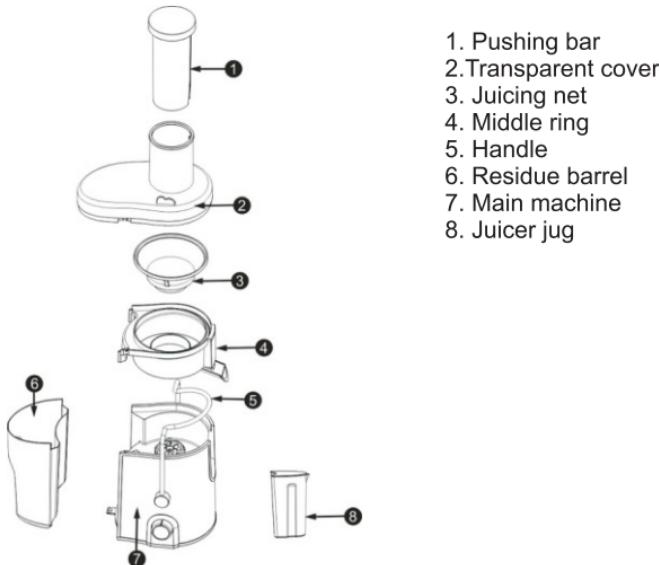

ATTENTION BEFORE USING


- This machine is set with safety unit, when the handle does not fasten the cover or the cutter seat is not fastened, the motor cannot turn, so as to ensure safety for the user.
- When disassembling or assembling the juicer, press the upper of feed port of the cover with your hand, then force the handle to slide in or out of cover slot.
- When disassembling juicing net, first remove the cover and residue barrel, then turn the middle ring up to 30 degrees by holding juicing nozzle with your hand, and take up, the juicing net will automatically leave the rotor.
- In order to avoid damage, before using, first check power supply for compliance with rated voltage .
- Clean all parts able to disassemble (refer to the section of "maintenance and cleaning").
- When assembling, please carefully read the diagram of "name and position of main components".
- Please carefully read the "attentions" before using.

FEATURES

- 2 Different speed stage to set according to hardness of fruits
- Stainless steel extractor/strainer
- %76 Juice rate
- 2L capacity detachable pulp reservoir
- 1000ml capacity juicer jug
- Stainless steel body
- 75mm pushing bar with large surface

USE THE APPLIANCE

1. Fit the processor bowl onto the main unit carefully.
 2. Please set the metal net correctly
 3. Place the residue barrel
- Caution: Always fit the bowl and attachment onto the appliance before adding ingredients.**
4. Place the transparent cover. Please be careful to cover both residue barrel and bowl.
 5. Set up the handle. Otherwise appliance will not start to work.
 6. Place the juicer jug
 7. Place the pushing bar.

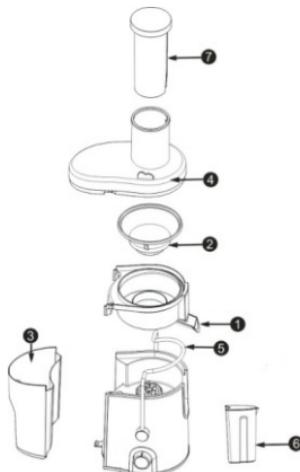

JUICING

1. Before using, please confirm the button switch of the main machine in stop state, in this way, in case assembly is not completed, starting the main machine can be avoided, so unnecessary damage for persons or property avoided.
2. Before juicing, first confirm juicing net and rotor clutched in position, and no hard contact between juicing net cutter and transparent cover. Put the transparent cover on, put the handle into the cover slot, then turn on the machine.
3. For using, assemble according to the diagram of "name and position of main components". Turn on power supply, press switch to let the machine run no-load for 5 sec. Put prepared vegetable or fruit into feed port of the juicer, press with the pushing bar, evenly, hard and slowly, juice of the vegetable or fruit can be found, original, fresh, good for health.
4. Note: when pressing food with the pushing bar, force shall be even or indirect, pressing force shall not be more than 1 kg, no too sudden force, otherwise, juicing effect will be reduced.

OPERATING TIME

This machine is designed with button switches of O grading, I grading, II grading (O for stop, I for weak grading, II for strong grading). For juicing, select strong grading, for operating time, after operating for 1min, stop for 1min, then use again. After the above operation is performed for three times, stop for 15 min, do not operate until the motor is cooled, in this way, service life of this machine will be prolonged, the machine will serve you more efficiently.

CLEANING AND MAINTENANCE

Always clean the removable parts immediately after use.

Note: Be careful when cleaning the parts. Avoid touching the sharp blades!

1. Disconnect the power from main supply.
2. Disassemble all removable parts before cleaning.
3. Clean all removable parts in dishwasher or in lukewarm water with cleanser.
4. Use dry cloth to clean the main body. Ensure that the interlock area is clear of food debris.
5. Store excess cord in the storage area at the bottom of the machine.

TECHNICAL SPECIFICATION

Voltage: 220-240V AC, 50/60Hz
Power: 800W
Class II



WEEE

This product contains recyclable materials. Do not dispose this product as unsorted municipal waste. Please contact your local municipality for the nearest collection point.

EN-60335-2-14
7 years life-time.

